


- <ES> Manual de instrucciones y garantías de la caja fuerte **STYLO**.
- <EN> Instruction manual and guarantee for the **STYLO** safe.
- <PT> Manual de instruções e garantia da caixa forte **STYLO**.
- <IT> Manuale di istruzioni e garanzia della cassaforte **STYLO**.
- <FR> Manuel d'instructions et garanties du coffre-fort **STYLO**.

STYLO

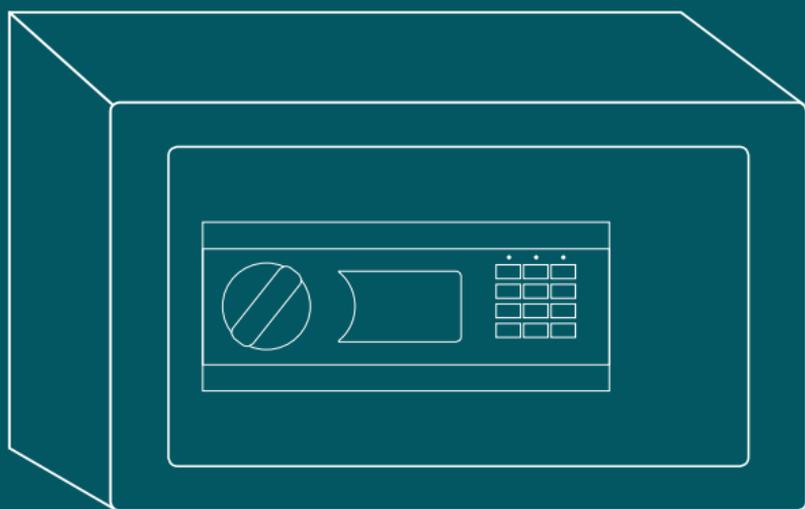

stick the serial no.


<EN>

Thank you for purchasing this safe. We advise you to read the instructions before you install and use the safe to prevent its improper use from making the guarantee void.

A. CHARACTERISTICS OF THE PRODUCT

FRONT DIAGRAM OF THE SAFE

1. *KNOB.*
2. *PLASTIC COVER – EMERGENCY LOCK.*
3. *NUMERIC KEYPAD.*

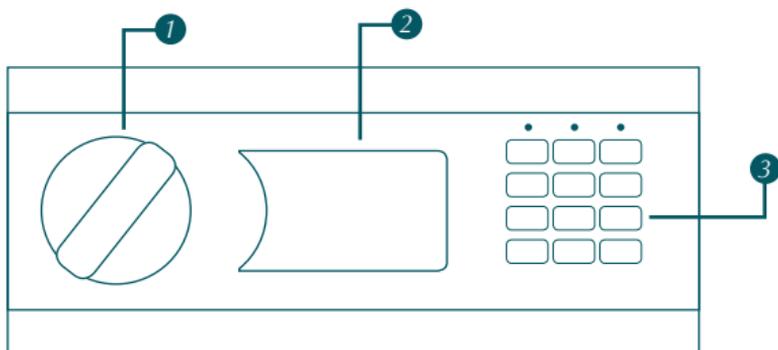

B. OPENING AND CLOSING THE SAFE

B.1. FIRST TIME THE SAFE IS OPENED AND INSTALLATION OF THE BATTERIES

- Remove the small plastic cover on the front panel by pressing the left side of the cover inward
- Insert the key into the key hole and turn it counter-clockwise direction
- Turn the doorknob clockwise direction to open the safe.
- In order to function, the safe needs 4 x 1.5 V alkaline batteries that are placed at the back of the door.
- Open the cover of the battery holder and place the batteries taking into consideration their polarity.
- On completion of this process the electronic system will be activated.

B.2. PROGRAMMING OPENING CODES

This safe has 2 opening codes: User code and master code.

The initial user opening code is 159 and the initial master opening code is 654321. For your security, it's important that you change them and configure the codes you desire. To change it, proceed in the following manner:

- Programming user code.
 - Press the reset button (on the left-side of back of door) with a sharp object. The yellow light will be on.
 - Input any 3-8 digits you want, press “#” to confirm. A beep will indicate the personal code has been accepted and stored.

<EN>

- Programming master code.
 - Press "0" twice. Then press the reset button with a sharp object. The yellow light will be on.
 - Input any 3-8 digits you want, press "#" to confirm. A beep will indicate the personal code has been accepted and stored.

B.3. NORMAL OPENING

To open the safe, enter your personal code followed by the letter "#". A green light will be on. Turn the doorknob clockwise to open the door.

If the entered code is incorrect, 5 short deep sounding beeps will sound. If the incorrect code is used 3 times consecutively, you must wait for 20 seconds before reattempting. If again the incorrect combination is selected 3 times, you must wait approximately 5 minutes before reattempting access.

B.4. CLOSING

To close the safe, push the door, input user or master code and turn the knob counterclockwise.

C. EMERGENCY OPENING

If you forget the code for opening, the safe can be opened using the emergency key.

- Remove the small plastic cover on the front panel by pressing the left side of the cover inward.
- Insert the key into the key hole and turn it counter-clockwise direction
- Turn the doorknob clockwise direction to open the safe.
- Once the safe is open, press the reset button on the back of the door with a sharp object.
- Change the code for opening (see point B.2)

CAUTION:

- Do not keep the keys in the safe itself.



D. LOW BATTERY INDICATOR

Each time that you use the safe, the electronic system verifies the condition of the batteries.

If the batteries are low, the red light (in the middle of the number panel) will warn you immediately. The safe needs 4 x 1.5 V alkaline batteries that are placed at the back of the door. Open the cover of the battery holder and place the batteries taking into consideration their polarity. Once you have changed them, you must reprogram the opening codes, (see point B.2).

E. INSTALLING THE SAFE

To reduce the risk of theft of the safe, it can be secured to floor, wall or in a cupboard. For your convenience, there are holes (diameter 8mm) on the back and in the bottom; therefore it can be fixed by the expansion bolts.

CAUTION: The safe should be placed horizontally when installing the safe.

GUARANTEE CERTIFICATE

The safe is guaranteed for a period of 24 months from the date of its purchase, as established by the Law 23/2003 dated July 10th on Guarantees in the Sale of Consumer Goods.

ABSS accepts the responsibility for lacks of approval declared within a period of two years in the event of any manufacturing fault which affects the functioning of the safe from the date of its delivery, according to the law. As from the first 12 months, the buyer must prove that the non-conformity already existed at the moment he received the safe.

The faults produced as a result of an improper use or installation, an excess of humidity or salinity, water or cement filtrations, force, the handling of the devices by non-authorized persons, disasters, impacts and falls are excluded from the guarantee.

The repair or substitution of any part due to a fault implies a 6-month extension to the guarantee of the part repaired or substituted. ABSS will accept the responsibility for the non-conformities that caused this repair when the same factory faults that caused the first repair are repeated.

Identity details

Name of the supplier

Date of sale

Name of purchaser

Address of purchaser

Identifying details of the safe

Model

Series number

IMPORTANT:

- These details must be completed as clearly as possible and without delay by the supplier, who will stamp and sign on behalf of his company in the place indicated.
- The certificate remains in the possession of the purchaser.
- The purchaser must keep the RECEIPT for the purchase of the safe, together with the GUARANTEE CERTIFICATE to be able to accredit the date of purchase. Both documents are necessary to use the guarantee.

SUPPLIER'S STAMP