

OPERATING INSTRUCTIONS FOR SECURITY BOX mod. TSE/2 – TSE/3

ATTENTION: Please, read these instructions carefully. Note the security box operational requirements, warnings and cautions. Use this product correctly and with care for the purpose for which it is intended. Failure to do so may cause damage *and/or* personal injury, and will invalidate the warranty. Please keep instruction security box for future reference.

CAUTION: Do not keep the keys in the security box, but in a secure place.

1. DOOR OPENING

To open the door for the first time: Press **1 5 9** (this is the preset numbers when the security box leaves the factory) and confirm by pressing the “*“ or “#“ key. You will hear a beep and the green light will be on, then within 5 seconds, open the door using the knob.

After 3 consecutive attempts using incorrect codes, the keyboard will be disabled for about 20 seconds. If again a incorrect combination is selected 3 times, the keyboard will be disabled for about 5 minutes.

Open the door after programming your personal code:

-Enter your personal code and press the “*“ or “#“ key. Within 5 seconds open the door.

2. PROGRAMMING OF THE PERSONAL CODE

- A. Press the red “**Programming button**” placed on the back of the door near the hinge, release it and you will hear two beeps. The yellow light will be on at the same time.
- B. Now press from **2 to 12** numbers that you wish to use as your personal combination and within 15 seconds press the “*“ or “#“ key.
- C. Before close the door, check few times your new combination with the door open.

3. BATTERY REPLACEMENT WARNING

If the batteries are low, the red light (in the middle) will flash after the opening procedure. In this case you must to replace the 4 batteries, also if you still have some possible openings.

4. REPLACING THE BATTERIES

The security box requires 4 x size "AA" (1.5V LR6) batteries.

Press in centre the batteries cover on the keypad and push it down. Replace the 4 batteries.

Put again the batteries cover in his place pushing it up.

5. EMERGENCY OPENING USING THE KEY

For your convenience, the security box have a lock, which you can use to open the door in case of emergency. The lock is placed under the batteries. So, take out the batteries cover and also the batteries. Insert the key into the keyhole and turn it clockwise, then open the door turning the knob towards the right.

6. INSTALLING OF THE SECURITY BOX

To reduce the risk of theft of the security box, it must be secured to the floor, wall or in a cabinet. For your convenience, there are holes both in the bottom and on the back; therefore it can be fixed by the commonly used anchor bolts supplied. If you will fix in a particular structures, it will be necessary to buy specific fixing bolts.

CAUTION: The security box should be installed in a horizontal position.