

TECHNOSAFE – “TE“- “MTE“ series

IMPORTANT: Read the instructions carefully before using the safe.

The safe is supplied with a service code “1234”

The personal code must be from min. 3 to max. 6 digits.

Keep your personal code in a safe place.

Do not use personal data like birthdays, telephone numbers...etc.

It will be convenient to replace the batteries every year.

The safe is supplied with 2 emergency keys and one battery box for external power supply to use in case of emergency. Please, never leave the keys and the battery box in the safe itself.

If the safe will not be used for a long time, please, take out the batteries.

Before installing the safe, please, verify the opening and closing with the door open utilizing a service code 1234.

INSTRUCTIONS FOR USE

1. Installing the batteries

The safe is delivered with the door unlocking. Pull the door open, remove the battery cover located on the back of the door and install the 4 batteries included, ensuring they are fitted with correct polarity (+ and -) and close the battery compartment. On the display will appear “**SECURE GOOD**” to indicate that the electronic system is activated.

2. Test for opening/closing using the service code “1234” (with door open and bolts retracted)

- Close the door completely and press the “**LOCK**” key. The bolts will be automatic out. On display appear “**CLOSED**” to signal that the door now is locked.
- Digit the service code “**1234**” and the door will be automatic open (the display will show “**OPENED**” to signal that the door now is opened).

PERSONAL CODE PROGRAMMING (with the door open and the bolts retracted)

- 1 Press twice the “**CLEAR**” key (display will show “**NEW**”).
- 2 Digit your personal code with a **minimum of 3 to maximum 6 digits** and press “**LOCK**” key (display will show “**AGAIN**”).
- 3 Digit your personal code again and press the “**LOCK**” key (display will show “**DONE**”). Your personal code is programmed.

If errors have been made while setting your new code, this will be indicated on display with the word “**ERROR**”. Repeat the procedure for setting your new personal code again, starting from 1.

Before to close the safe, it is advisable to check that everything it is OK by operating the opening and closing procedure for a number of times with door open. If all it will be good, you can close the door.

The personal code will be automatically deleted in case of pressing of “CLEAR” key twice (with bolts retracted). If this operation is made accidentally, it is necessary to program the personal code again following the procedure from the beginning.

TO CLOSE

- 1 Close the door completely.
- 2 Press “**LOCK**” key (the bolts will be automatic out and the display will show “**CLOSED**”).

If a word “**ERROR 2**” appear on display, that means the bolts are blocked by closing and the bolts return in the open position. Please, remove the obstacle and repeat the operation from the beginning.

TO OPEN

- 1 Digit your personal code
(the bolts will be automatic retract and the display will show “**OPENED**”).

If something block the return of the bolts, on display appear the word “**ERROR 1**”. This could happen, for example, if the bolts are bended and they force on the internal part of the frame. In this case it is necessary to push the door and repeat the opening procedure from the beginning.

SECURITY LOCKOUT

The security lockout feature will deter unauthorized openings. If attempts are made to open the safe using incorrect codes (6 digit codes), with a maximum of 4 attempts, the safe will shut down and remain inoperable for 3 minutes. Pressing any keys during the lockout, a timer countdown will be on display (“**HOLD03**”-“**HOLD02**”-“**HOLD01**”). After the three minutes, the safe can be used again.

BATTERY CHECK

At any time, the battery level of the safe can be checked by pressing the “**LOCK**” key when the door is closed (bolts out).

When the display show **BA-HI**, the level of the batteries is good. When the display show **BA-LO**, the level of the batteries is low and you need to change the batteries using 4 x 1,5 V. AA size alkaline batteries.

POWER FAILURE OPENING

In the event of loss of power due to no battery power, you need to use the external plug (supplied).

- Insert in the battery-box 4 x 1,5 V. AA size alkaline batteries (see pic. 1).
- Remove the adhesive label marked with “**Technosafe**” and you will see two holes.
- Insert the plug of the battery-box in the hole placed on the right side (see pic. 2).
- Digit your personal code to open the door.
- Change the internal batteries.

TO OPEN THE DOOR WITH MECHANICAL KEY (with bolts extended).

The emergency key is to be used only when the safe is locked.

When the safe is closed and you cannot open it by your Code or for change the batteries, then you have an emergency opening with a override key.

- Remove the adhesive label marked with “**Technosafe**” and you will see two holes.
- Insert the emergency key with the cut on the top-side in the hole placed on the left side (see pic. 2).
- Turn the key clockwise until the stop point. The safe will display “**MANUAL**”.
- Turn the key anti-clockwise and take out the key.
- Press the “**LOCK**” key and the bolts will be automatically retract.
- Now, you need to program your new personal code following the instructions.


WARNING!
NEVER LEAVE YOUR
EMERGENCY KEY IN
THE SAFE

CAUTION

It must be remembered that even new, packed batteries can sometimes be defective, for various reasons, or have a brief duration. In the event of failure of the motor release, or other faults, first of all, replace the battery with a new alkaline batteries.

The manufacture declines all responsibility for failure to observe the instructions given, or for improper use of the safe, thus causing the warranty to lapse.

Pic. 1

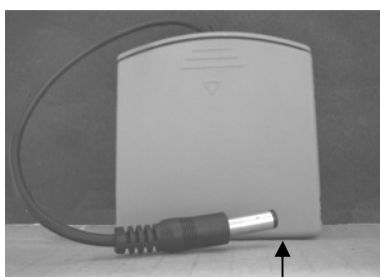

Battery-box

Pic. 2



Emergency key

External battery